CE

Condensate Pumps

Instruction Manual

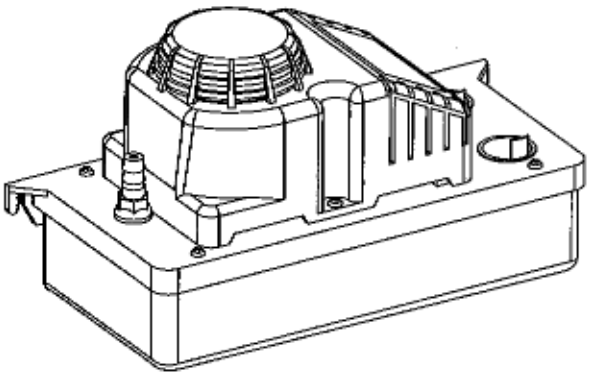

Model: RS300

HWS GmbH
www.hws-trade.de

USER MANUAL

■ CONDENSATE PUMPS SPECIFICATION

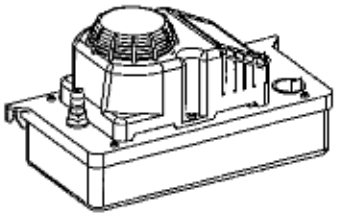

Type Of Motor	Condensate Pump	
Rating	220V 50Hz	110V 60Hz
Max. Pump Head	5.2 M	6.2 M
Power Consumption	58 W	58 W
Check Valve	Concealed inside	
Inlet Up	25m/m Inner size	
Outlet	10m/m Inner size	
Size	280×125×140	

■ WIRING DIAGRAM

a. 220V/50Hz

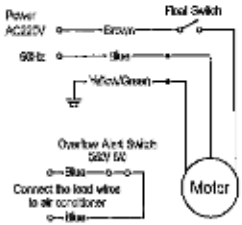

b. 110V/60Hz

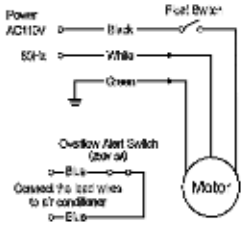

■ FLOW RATE CHART

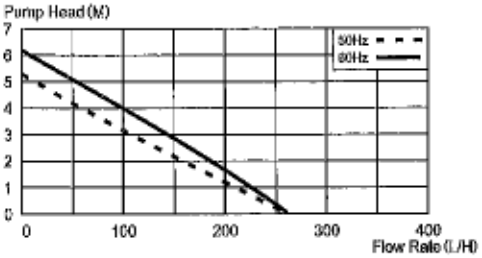

■ ATTENTION INSTALLER

Before installing pump, allow air conditioner to cycle several times collecting condensate in a separate container to help flush any residual oils that may be remaining in the system.

■ ATTENTION INSTALLER

This unit is equipped with a secondary safety switch. Connect to Class 2 low voltage only.
This switch should be wired to set off a warning buzzer, or shut off air conditioner equipment should unit cut off. See enclosed instructions for details.

PIPE CONNECITION

■ AIR CONDITIONER APPLICATIONS

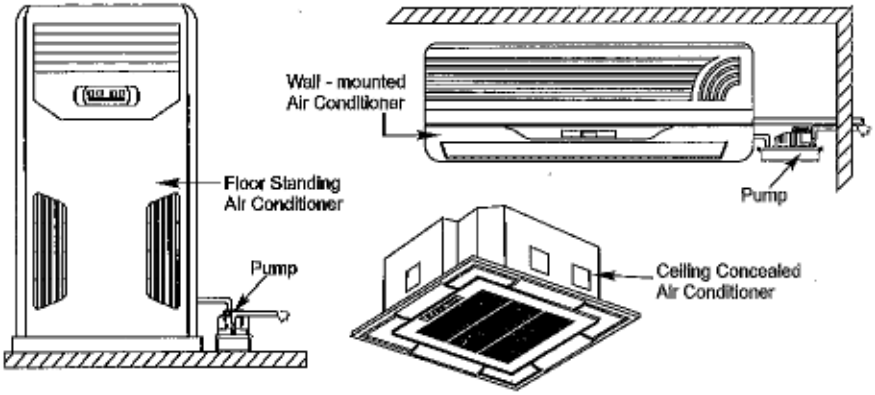

■ INLET CONNECTION

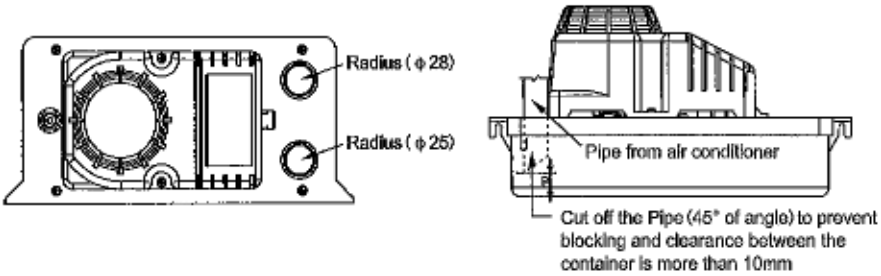

■ INLET CONNECTION

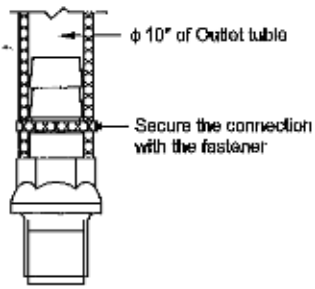

■ WARNING

To reduce risk of electrical shock connect only to a properly grounded, grounding-type receptacle. Install only on a circuit protected by a ground-fault circuit-interruptor (GFCI). This pump has not been in investigated for use in swimming pool and marine areas. This is not a submersible pump.

HWS GmbH
www.hws-trade.de

4 262356 920128

NO: 8120399000 2312B